


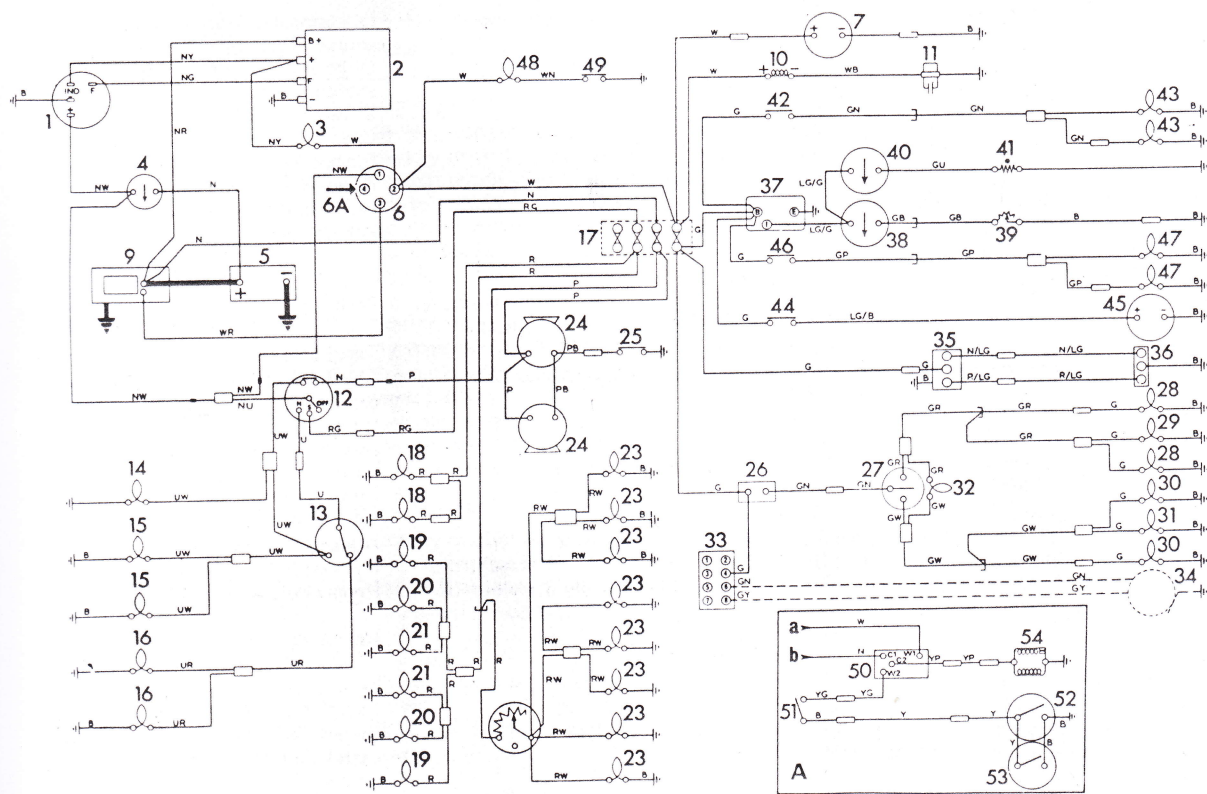

KEY TO WIRING DIAGRAM TR5 P I (RIGHT HAND STEER)

- | | | | |
|---|-------------------------------|-----------------------------|---|
| 1 Alternator | 15 Main beam | 30 RH flasher lamp | 46 Stop lamp switch |
| 2 Alternator control unit | 16 Dip beam | 31 RH flasher repeater lamp | 47 Stop lamp |
| 3 Ignition warning light | 17 Fuse box | 32 Flasher warning light | 48 Oil pressure warning light |
| 4 Ammeter | 18 Front parking lamp | 33 Heater switch | 49 Oil pressure switch |
| 5 Battery | 19 Rear marker lamp | 34 Heater motor | |
| 6 Ignition/starter switch | 20 Tail lamp | 35 Windscreen wiper motor | A Overdrive (optional extra) |
| 6a Ignition/starter switch - radio supply connector | 21 Plate illumination lamp | 36 Windscreen wiper switch | 50 Overdrive relay |
| 7 Petrol pump | 22 Panel theostat | 37 Voltage stabilizer | 51 Overdrive column switch |
| 9 Starter motor | 23 Instrument illumination | 38 Fuel indicator | 52 Overdrive gearbox switch 2nd gear ON |
| 10 Ignition coil | 24 Horn | 39 Fuel tank unit | 53 Overdrive gearbox switch 3rd and 4th gear ON |
| 11 Ignition distributor | 25 Horn push | 40 Temperature indicator | 54 Overdrive solenoid |
| 12 Column light switch | 26 Turn signal flasher unit | 41 Temperature transmitter | a From fuse box |
| 13 Dip switch | 27 Turn signal flasher switch | 42 Reverse lamp switch | b From fuse box |
| 14 Main beam warning light | 28 LH flasher lamp | 43 Reverse lamp | |
| | 29 LH flasher repeater lamp | 44 Windscreen washer switch | |
| | | 45 Windscreen washer motor | |

Colour Code

N Brown	L/G Light green
U Blue	W White
R Red	Y Yellow
P Purple	S Slate
G Green	B Black